


spacing varies

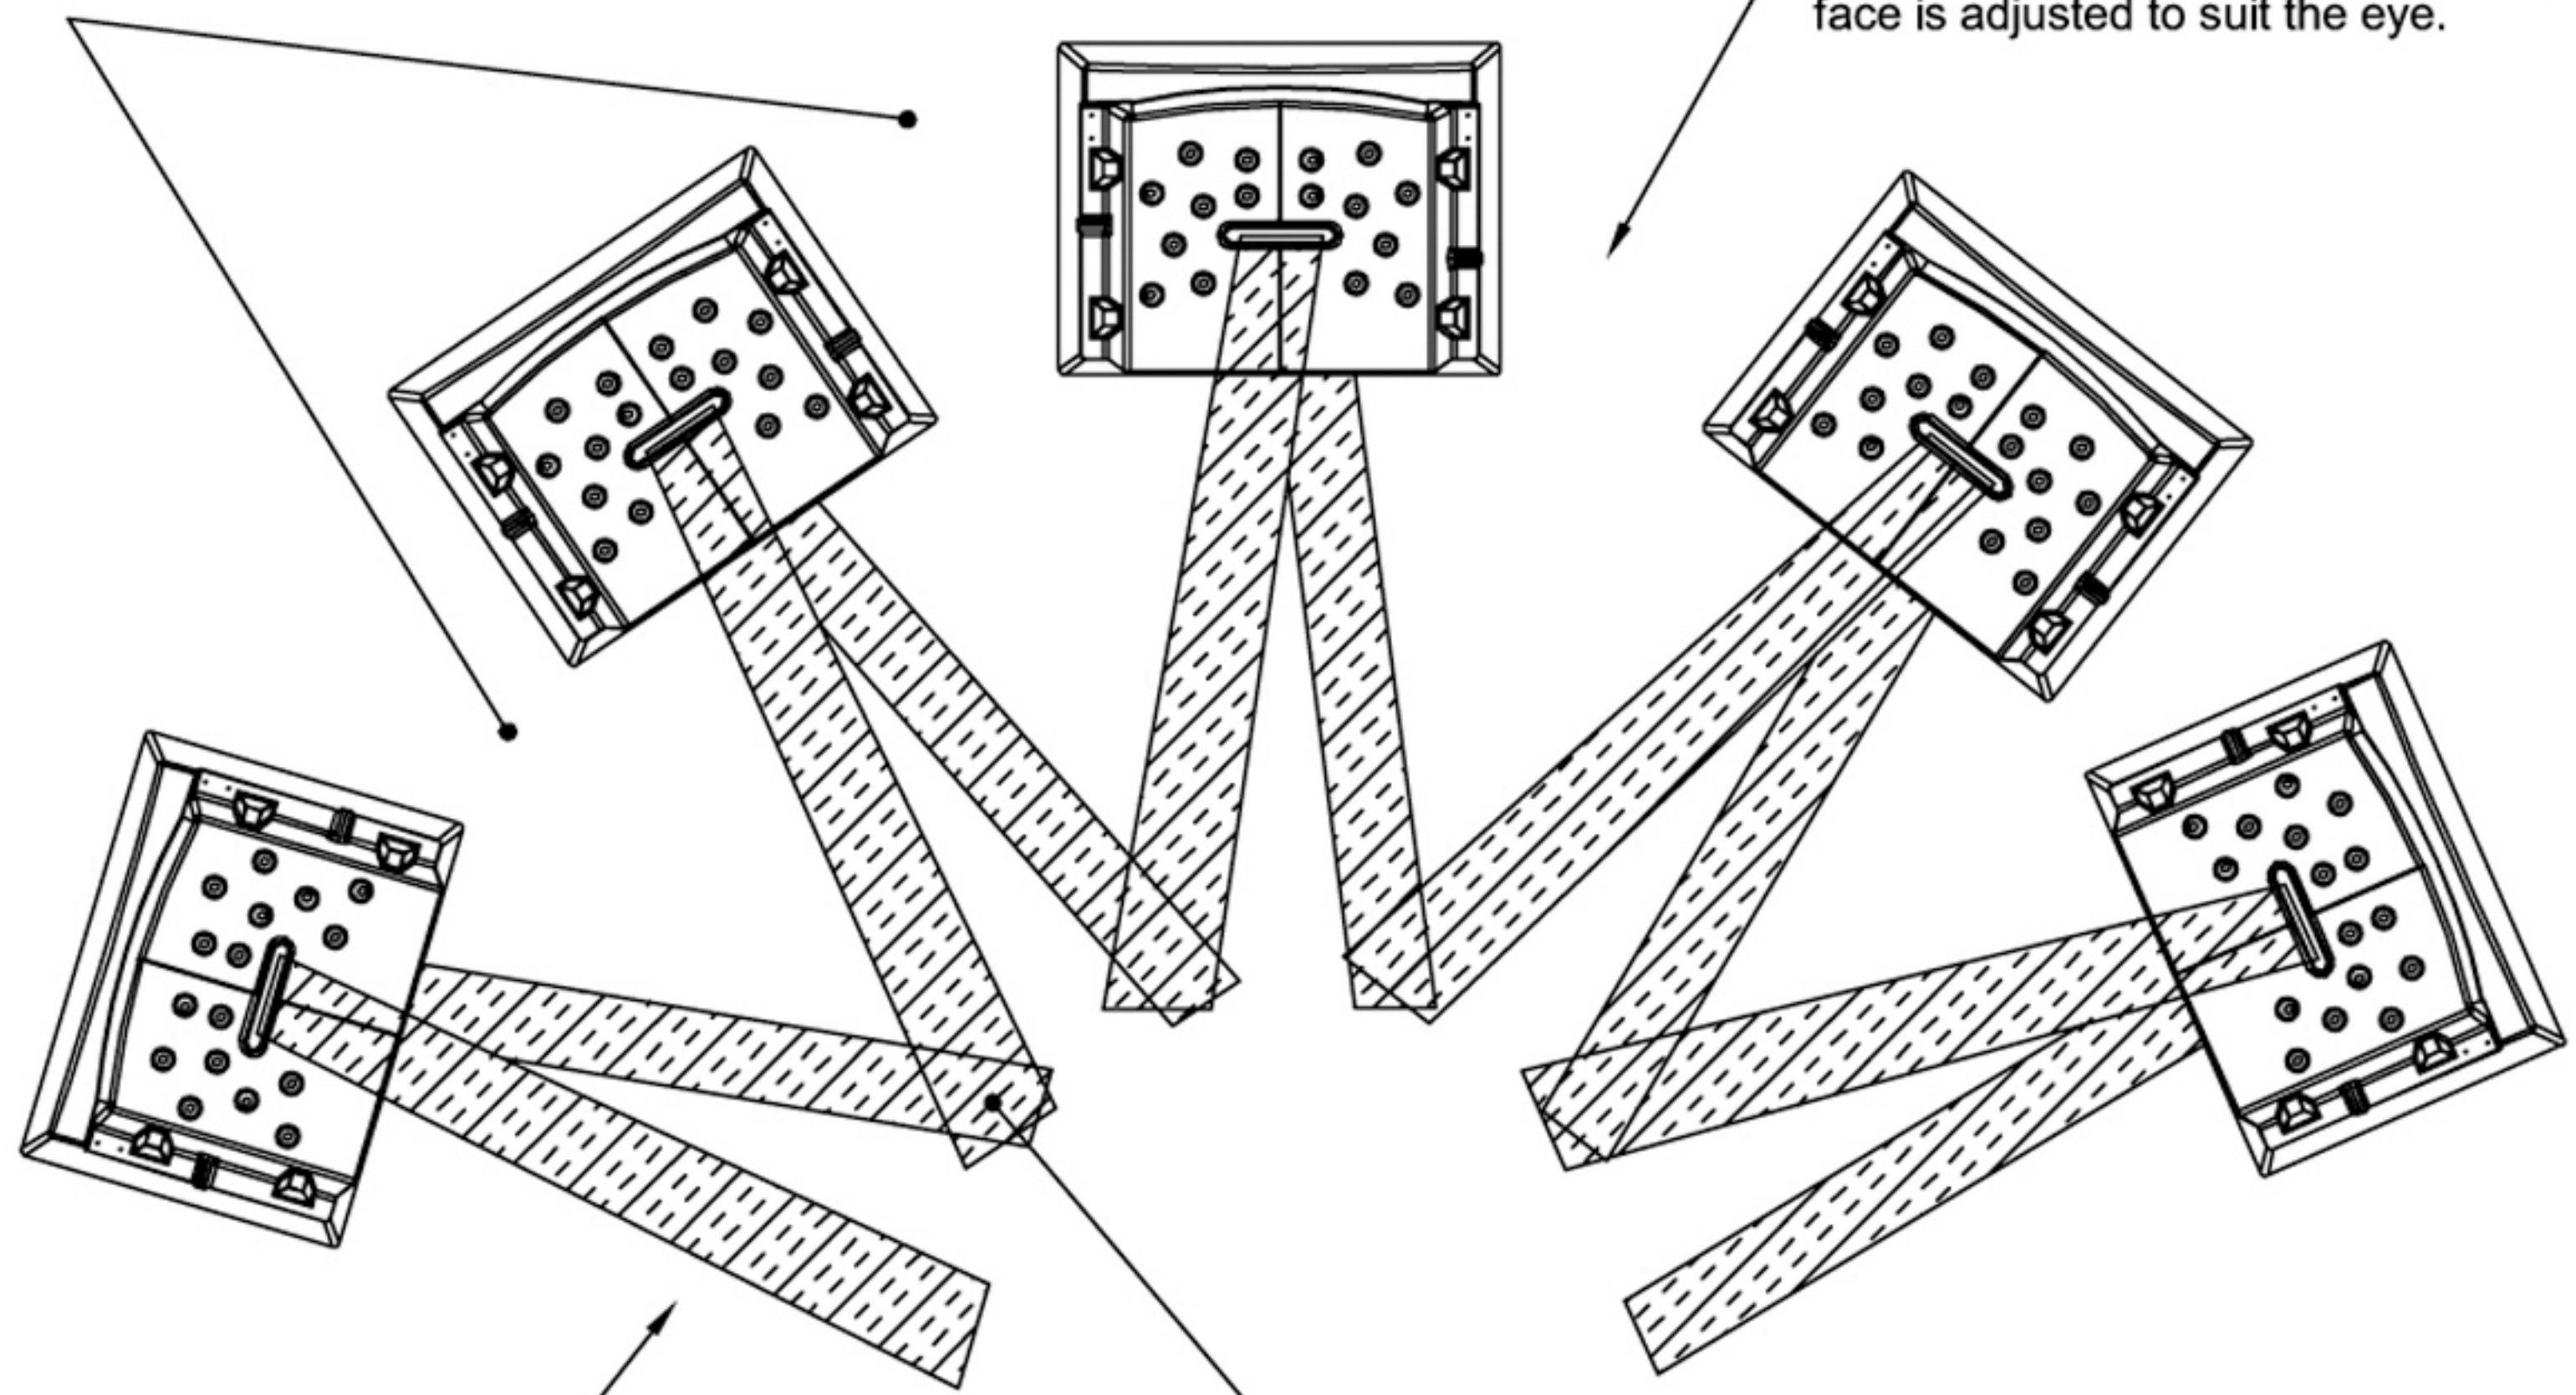

Spacing for tightest convex radius is achieved by tails of modules touching while spacing at face is adjusted to suit the eye.

Overlap SmartGrid as it extends into the fill. Place 2-3" of rock between panels.

SmartRadius is to be used for such radii but are not needed for most radius wall sections.



These graphic representations are intended for preliminary design purposes only and are not to be used for construction without the signature of a registered professional engineer.

Scale:
None

C185 Convex Radius Detail